



Rx Entry

Blocking

Generating

Fining & Polishing

Hard Coating

AR Coating

Tracing

Edging

# EXCELON HPE-410

EDGER & INTEGRATED TRACER




OPTIONAL  
**INTEGRATED  
3D TRACER**

**STRONGER  
MOTOR**

**MORE  
EDGING  
OPTIONS**

## EXCELON HPE-410

EDGER & OPTIONAL INTEGRATED TRACER

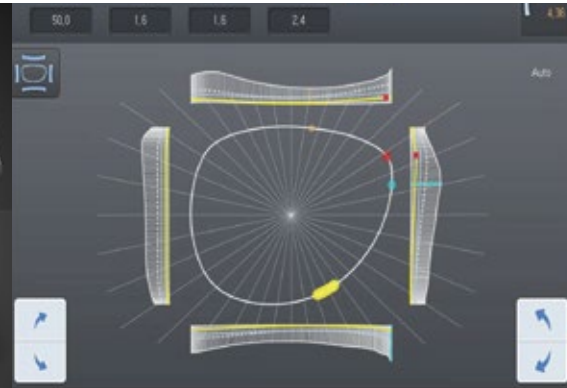

**Integrated 3D Tracer (optional)**  
or as a separate add-on

**Enhanced Drive Motor**

increased overall performance and productivity

**6 Edging Positions**

including auto, manual, base curve (absolute), percent, front offset and rear offset

**8 Edging Types**

including bevel, rimless, grooving, mini bevel, partial bevel, partial grooving, dual grooving and hybrid grooving

**Hydrophobic Mode**

sets all the edging options for axis-safe cutting with one click of a button

**Multiple Job Handling and Concurrent Processing**

allows the user to manage jobs that have been paused, completed, and saved or jobs currently being processed. User is able to prepare the next edging task while the edger is in process

**4 Types of Retouch Options**

including size, polishing, grooving and safety bevel

**Retouch up to 6 of the Latest Jobs**

6 single sided edges or 3 double-sided edges

**High Resolution LCD Touch Screen Interface**

9.7" display  
1024px X 768px

**3D Binocular**

Resolution: 14,400 points for more accurate and intelligent frame and lens pattern reading

**Direct DCS (OMA) Import**

saves time and file duplication concerns by skipping the conversion step

**External memory**

capabilities for SD Cards

**Supports Bar Code Reading**

Power	Dimensions	Weight	System Compatibility	Options
AC 100~120V AC 200~230V 50-60Hz	W x D x H 24in x 22.5in x 13.5in 603mm x 570mm x 340mm	104lbs 47kg	8000 Series	Bar Code System Integrated Tracer Module



DIAGNOSTICS



SURFACING



COATING



FINISHING



CONSUMABLES



SERVICE